

# A5正反面印 105克铜版纸

## A5正面

### AROMA DIFFUSER

#### INCLUDED :

- Diffuser unit
- Power adapter
- User manual

#### OPERATION :

- Connect power adapter to power jack on the bottom of the unit before filling the water tank with water.
- Remove the diffuser lid from the base to access the water tank.
- Fill the water tank with room temperature tap water to no higher than max water level line. For maximum run time, fill to MAX fill line (150 ml). Use water under 45°C (113°F) and avoid getting water into the air outlet.
- DO NOT exceed 150 ml of water. Fill water reservoir up to water level line «MAX».
- Add 2 to 3 drops of essential oil (depending on preference) to the water (150 ml). For stronger scent add more drops of oil.
- DO NOT add more than 2 drops of oil for every 20ml of water. Over use of oils WILL shorten the life of your diffuser. Replace cap.
- Replace the diffuser lid and ensure that the cover is sitting flush with the base.
- Press power button to begin misting and select desired diffusion program.

#### DIFFUSER SETTINGS:

##### MIST SETTING:

- Press the **MIST** button to set the desired runtime.
  - Press once for continuous diffusion.
  - Press 2 times for 30 sec cycle (intermittent misting).
  - Press 3 times to turn off the diffuser.
- The diffuser will turn OFF automatically if the water level is not sufficient.

#### DIFFUSER SETTINGS:

##### TIMER FUNCTION:

- Press the **TIMER** button to activate the timer.
  - Press one time to activate the timer at 1 hour.
  - Press 2 times to activate the timer at 2 hours.
  - Press 3 times to activate the timer at 4 hours.


## User manual

#### MOVING AND STORAGE INSTRUCTIONS :

- DO NOT pull the cable while it is working.
- DO NOT move the diffuser while in operation, water could leak into the external mechanism of the unit and it can damage the internal pieces.
- Clean diffuser before storing.
- When moving the device hold securely by the base.

#### LIGHT SETTINGS :

- Press the **LIGHT** button once to activate automatic color changing.
- Press again to stay on one color.
- Press again to select the warm white light .
- Press one more time to turn off the light.

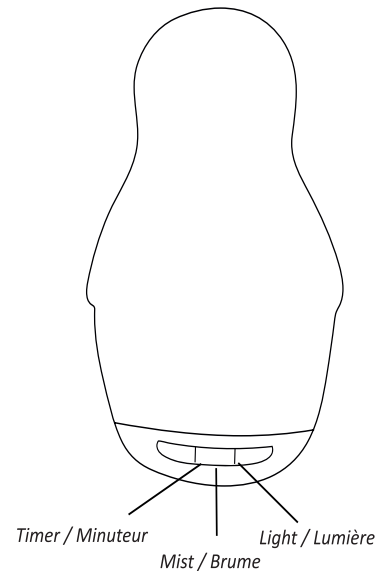

## A5反面

#### CARE AND MAINTENANCE :

- Turn off unit and unplug prior to cleaning.
- Clean the water tank before changing essential oil blends.
- Clean the water tank with a clean and soft cloth or extremely soft brush.
- Clean the ultra-high sonic disc with a soft cloth.
- DO NOT use metal or harsh abrasives to scrape the ultra-high sonic disc.
- If the ultra-high sonic disc builds up excessive residue, it may be necessary to clean the unit repeatedly to remove the debris or dispense a few drops of rubbing alcohol onto a clean cotton swab and wipe clean.
- Let the unit dry in a well-ventilated area (minimum of 3 hours).
- DO NOT use vinegar or other corrosive cleaning agents.
- Avoid water leaking into the air outlet.
- Periodically wipe off the fan intake on the bottom of the unit with a dry soft cloth to prevent dust build-up.

#### WARNING :

- DO NOT use on or near flammable substances, heat sources or open flames.
- DO NOT use the diffuser on any surface that would damage the unit or surface.
- DO NOT operate the diffuser if the cord or plug is damaged.
- DO NOT use the diffuser if it's not operating normally or if any part of the device is broken. Turn your diffuser off immediately.
- DO NOT touch the ultra-high sonic disc with bare fingers or scrape it with metal tools. This WILL break your diffuser and void any warranty.
- Keep your diffuser away from children and pets.
- Use the diffuser on a stable and dry surface ONLY - Using electronics on wet surfaces can result in electric shock.
- Always put water in the reservoir first, then add your essential oil into the water.
- Always turn off and unplug the device during maintenance or when not in use.

#### WARRANTY :

This product has a 3 month warranty for proper use in accordance with this manual against manufacturing defects. Accidental damage is not covered by the warranty. This warranty period is 3 months from the date of purchase. In case of any problems during the warranty period, please contact your retailer for maintenance or claims. Proof of purchase will be required, you must keep your receipt of purchase with this manual safely.

Corrosive oils such as Citronella may cause damage to the ultra-high sonic disc if left in the water tank. This type of damage is not covered under the warranty.



Respecter l'environnement! Ne pas jeter de composants électriques dans la poubelle. Les emmener au centre de recyclage le plus près, afin qu'ils y soient recyclés ou mis au rebut.

Protect the environment! Do not throw electrical parts into the trash. Take them to the nearest recycling centre so they will be recycled or safely disposed of.