

Glass aromatherapy humidifier

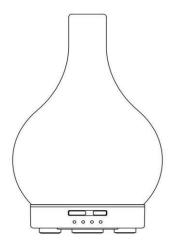


Thank you for choosing our product. For the most efficient use of the product, please read the manual carefully before use. This product is intended for home or office use only.

Product structure drawing

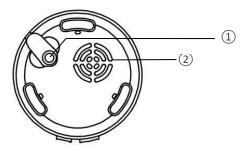

Position of DC power hole

- 2 Air supply
- ③ Glass cover
- ④ Inner cover
- 5 Air outlets
- 6 Water tank
- 7 Function button/status indicator

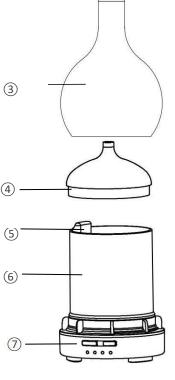

Introduction to functions

- Ultrasonic technology is used to spray a solution of natural essential oil dissolved in water to ultrafine
 3-Sum particles, and at the same time generate a large number of negative ions, which causes the natural essence to be
 easily absorbed by the human body, which fully utilises the efficacy of essential oils and aromatherapy to achieve the health,
 soothing, and skin moisturising effects.
- 2. Intelligent chip control, simple and clear control logic with multi-stage time control.

Button function

Description of the function of the MIST button:

Press the timer button once: to activate the AUTO operation Press the mist button two times: to activate the intermittent spray operation Press the mist button three times: to activate an operation for 1 hour Press the mist button four times: to activate an operation for 3 hours Press the timer button five times: to switch the diffuser off

Long press the button: beep twice, thick fog Long press the button: one beep, weak fog

There is an automatic shutdown of the diffuser if there is not enough water

Description of the function of the LIGHT button: Press the lighting button once: to switch on a colour changing light Press the lighting button twice: to confirm your favourite choice of the light colour Press the lighting colour button another time: to change the light colour Press and hold the lighting colour button: to switch of the light completely

Mist

- 1. Press the button once: it runs until there is no water left
- 2. Press the button twice: 15 seconds intermittent spraying
- 3. Press the button three times: set the timer for 1 hour
- 4. Press the button four times: set the timer for 3 hours
- 5. Press the button five times: close

Long press the button: beep twice, thick fog Long press the button: one beep, weak fog



Method of application

 Remove the decorative cover and inner cover in the direction of the arrow. When you remove the tank, there may be residual water left in it from previous use.
 Please keep the water tank out of the horizontal position so that residual water


does not enter the tank and cause a failure.







When filling the tank with water, do not exceed the maximum limit. Add 2-3 drops of essential oil.

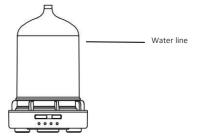

Measures for filling water:

Add the appropriate amount of water according to the water level line. If the volume of water exceeds the maximum limit, the device will not release any mist or only very little. Use clean water or tap water.



3 . Install the decorative and inner cover in the direction of the arrow and make sure they are placed correctly.





4. Insert the output plug of the power adapter into the DC power port and connect the power supply. Press the MIST button lightly to select the desired mode of operation. The speed light will illuminate and the product will enter the operating state. Make sure the product is placed on a flat surface during use.


Note:

If the water temperature and quality are affected by external factors, the amount of rising steam at the start of the operation may be less. After a few minutes, the steam volume may return to normal and stabilize.

Cleaning method

- 1. Remove the power adapter from the socket and from the device, then remove the glass lamp shade and the inner cover of the tank.
- 2. Pour out the remaining water from the tank. Be careful not to spray water into the air outlet at the bottom of the water tank.
- Moisten the cloth with a neutral detergent diluted with warm water, then wring it out. Thoroughly wipe the machine and the water tank cover.

4. Use cotton swabs etc. when cleaning the bottom of the water tank. Do not touch or squeeze the ultrasonic panel at the bottom of the tank.

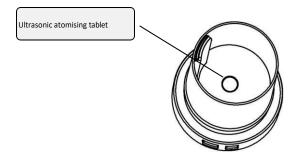

Precautions for use

- Clean the water tank regularly. If the bottom of the water tank and the ultrasonic energy converter are dirty, problems may occur. Clean it every 6 uses (5-7 days).
- Do not move or tilt the device while it is in operation to prevent water from leaking inside the product.
- To add water, it is necessary to open the cover of the inner tank. It is forbidden to add water from the tap to the tank through the mist hole.
- When the device is in operation, do not block the mist opening, touch it or stay close to the mist opening for an
 extended period of time to avoid burns.
- Water drops may appear on the tank cover inside the device, on the external glass decorative shade and on other components. Be careful of water drops when opening.
- When you are not using the device, do not forget to disconnect the power adapter from the socket.
- If you are not going to use the device for a long time, dry it properly and store it.
- Please use essential oil with natural ingredients extracted from plants. Do not use perfume or synthetic perfume to avoid malfunction.
- Do motificiting stream and initial with the herizer of what the not with a with

oil.

Emergency procedure in case of water spillage

There is water in the water tank. If water has leaked out by accidentally pushing or tilting the device, follow the procedure below to prevent damage.

- 1. Immediately remove the power adapter from the socket and from the device.
- 2. Immediately remove the glass decorative shade and the inner cover of the water
- 3. tank. After emptying the tank, remove the accumulated water inside the body.
- 4. After removing the glass decorative shade and the inner cover of the water tank, dry the body.
- 5. Leave the device to rest for 48 hours in a dry and ventilated place before using it again.

Troubleshooting

If the device malfunctions due to incorrect settings or poor maintenance, you can proceed as follows.

| Malfunction | Exclusion methods |
|--|---|
| No electricity The power status light is off | Check that the power adapter is plugged into the electrical outlet, that the output plug is connected to the device |
| Unable to start | Check the water tank for water Check that the ultrasonic sensor is not covered with limescale. In case of dirt, clean the device |
| Mist is weak | Check that there is no excess water in the water tank Check that the ultrasonic sensor is not covered with limescale. In case of dirt, clean the device Check that the lower ventilator inlet is not blocked |

Conventional technical parameters

Product name: Glass aromatherapy humidifier Product dimensions: ø 150 mm x height 230 mm

Water tank capacity: 160ML Rated voltage : DC24V Product weight : 790G Rated current: 500 mA