

ULTRASONIC AROMA DIFFUSER CUTE OWL



User Manual

Product Description

The aroma diffuser combines elements of traditional oriental culture with the latest knowledge and technologies of modern science. Using ultrasonic technology, it breaks down water and essential oils into a fine mist of micro-particles, which is released into the air along with active ingredients and anions. This technology does not heat the essential oils, thus preserving their full therapeutic effects. The diffuser naturally scents and humidifies the environment, promotes relaxation, quality sleep, concentration, and overall well-being, while also helping to neutralise undesirable odours indoors.

Specifications

Product: Ultrasonic Aroma Diffuser Cute Owl
Material: Ceramic + Plastic
Power Supply: AC adapter
Input voltage: 100–240 V
Output voltage: DC 24 V
Output current: 500 mA
Frequency: 50–60 Hz
Power : 12 W
Water tank capacity: 200 ml
Mist output: 20–30 ml/h
LED light: 7 colours (each has a bright and dim mode)
Accessories : User manual, AC adaptor

Device Features

- The ultrasonic diffuser is made of ceramic, which is resistant to corrosion and acids. Essential oils can be added to the diffuser.
- With a single press of a button, a fine mist with a pleasant fragrance is released, helping to relax the mind and enhance the environment.
- The diffuser has two misting modes (intermittent and continuous). The coloured light can be changed to adapt the atmosphere.
- Safe and reliable operation. Suitable for both office and home.
- If the water runs out in the tank, the device will automatically switch off.



Warning

Please read the following safety instructions carefully before using this appliance. The stated precautions are to prevent injury to yourself and other persons and to protect the appliance from damage.

Safety Instructions



DANGER OF ELECTRIC SHOCK

- Plug the appliance only into a mains socket installed in accordance with applicable regulations, with a voltage corresponding to the rated voltage stated on the type plate.
- The appliance must not be immersed in liquid under any circumstances. Do not expose it to moisture or use it outdoors. If liquid does get into the appliance, immediately pull the appliance plug out of the mains socket and have the appliance repaired by qualified specialist personnel.
- In the event of operational faults and before cleaning the appliance, pull the plug out of the mains socket.
- Never pull the cable when removing the plug from the socket.
- Do not wrap the mains connection cable around the appliance and protect it from damage.
- If the power cable of this appliance is damaged, it must be replaced by the

manufacturer, its customer service, or a professionally qualified person to prevent the risk of injury.

- Do not bend or compress the mains connection cable and lay it in such a way that no one can step on it or trip over it.
- Never touch the appliance, mains cable, or plug with wet hands.
- Immediately after use, disconnect the appliance from the mains. Only when the mains plug is pulled out of the mains socket is the appliance fully disconnected from the power.
- Do not repair the appliance casing yourself. In such a case, safety is not guaranteed and the warranty becomes void. Have a faulty appliance repaired only by authorised specialist personnel.
- Ensure that the mains cable is not wet or damp during operation.



- Never use the appliance near water, especially not near washbasins, bathtubs, and similar containers. Proximity to water poses a danger even when the appliance is switched off.



WARNING! Failure to observe these safety instructions may result in an accident, which may lead to minor or serious injury.

The manufacturer is not liable for damages caused by improper use of the product.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are constantly supervised or have been instructed on the use of the appliance by a person responsible for their safety.
- Use the appliance in an environment with a temperature between 10 °C and 30 °C.
- The device may only be used with the supplied power supply unit.
- Do not disassemble, modify, or heat the appliance. Do not cut, damage, modify, or strain the power cord. This could result in electric shock or fire.
- Use only **clean cold water** (bottled or tap water).
- Never **exceed the maximum water level**. Always pour in water before adding essential oils. Use a measuring cup or other container to refill – do not fill the tank directly from the tap.
- Into the tank pour only **water with essential oil**. Any other liquids may permanently damage the device or be harmful if inhaled.
- If the device smokes, emits an unusual odour, or any non-standard situation occurs, stop using it immediately.
- Do not touch any part of the device with wet hands.
- Do not allow mist to fall directly onto furniture, clothing, or walls.
- Essential oils may cause discolouration. **We recommend using only BEWIT essential oils**. In case of accidental spillage, use a clean cloth.
- Unplug the device when not in use.
- Do not cover the device during operation.
- Internal use of essential oils is only possible in accordance with applicable legislation and the recommendation of a qualified expert.

Instructions for use

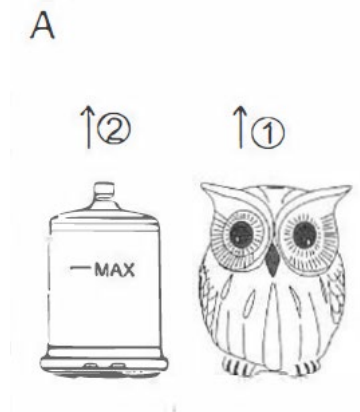


Fig. A

1. Remove the outer cover
2. Remove the inner cover

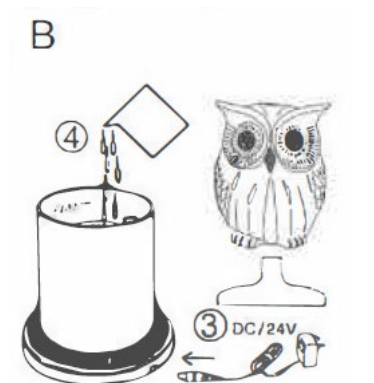


Fig. B

3. Plug the power cable into the side .
4. Use only clean water (do not pour above the MAX line – less water means more mist; never pour water into the air outlet) and add 2-3 drops of essential oil.

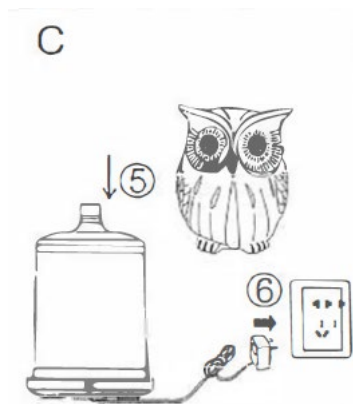


Fig. C

5. Replace the water tank cover.
6. Plug the device into a power socket.

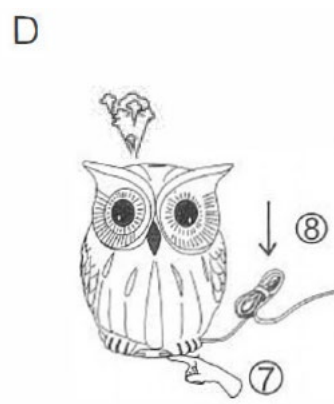


Fig. D

7. Press the button **MIST** to turn on the mist.
Press the button **LIGHT** to turn on the light.
8. Replace the outer cover.

Operating Instructions

LIGHT button

- **Short press:** turns on the LED light. 7 colours automatically alternate (each has a bright and a dim mode).
- **Another short press:** the light stops on one colour; repeated presses allow you to change colours manually.
- **Long press:** the LED light turns off.

MIST button

- **Short press:** turns on continuous misting.
- **Another press:** intermittent mode (30s on/30s off).
- **Third press:** misting turns off.
- **Long press:** turns off both mist and light.

Other functions

- If the water runs out, the device will automatically switch off and the light will go out at the same time.
- If there is insufficient water, both functions will stop.
- For a new device or after a long period of disuse, we recommend first cleaning the tank with a damp cloth or water.

Maintenance

After 7 uses or approximately after a week, we recommend cleaning the device:

- Switch off the power and unplug the cable.
Clean the ultrasonic diffuser with a cotton bud and allow to air dry.
- Wipe the outer surface with a damp cloth. If there are oil residues on it, use a cloth with a slightly diluted cleaning agent.



Disposal at the end of the appliance's life

This product must not be disposed of as ordinary municipal waste. At the end of its life, hand it over to a collection point or a designated place for the recycling of electrical and electronic equipment, in accordance with applicable legal regulations. Correct disposal helps protect the environment and human health.

Dispose of product packaging (paper, plastic) in accordance with local waste sorting regulations.

Troubleshooting

Problem	Possible Cause	Solution
Diffuser does not switch on	Not connected to power / faulty adapter	Check adapter connection, or try a different socket
No mist is coming out	Lack of water / maximum level exceeded / cover not properly fitted	Top up water, fit cover correctly
Weak mist	Dirty ultrasonic plate / hard water	Clean the plate with a soft cloth, use clean water
The device is making an unusual noise	Lack of water / uneven surface	Top up the water, place on a flat surface

Problem	Possible Cause	Solution
Light not working	LED is off	Press the Light button
Unpleasant odour	Tank not cleaned	Clean the tank with a soft cloth
Water leaking from the tank	Lid not fitted correctly / device is tilted	Fit the lid correctly, place on a horizontal surface

Warranty

This product has been strictly tested before leaving the manufacturer. During the statutory warranty period from the date of purchase, the customer may request free repair or replacement due to faults arising from normal use. If necessary, please contact the product seller.

The warranty does not cover faults arising from accidents, improper use or maintenance.

What can affect your warranty?

The warranty does not cover problems not caused by a manufacturing defect, for example: Water ingress or spillage into the device (e.g. if water is poured from the wrong side instead of the designated drainage hole).

Damaged or broken parts. Limescale build-up or stains. Worn or oxidised components.

Use of synthetic or unsuitable oils that may impair the proper functioning of the device.



BEWIT Natural Medicine, s.r.o.
Michalská 2030, 710 00 Ostrava
Tel.: (+420) 552 305 105
Email: info@bewit.love

**EU Declaration of Conformity**

according to Act No. 22/1997 Coll., as amended by Act No. 71/2000 Coll., Act No. 102/2001 Coll., Act No. 205/2002 Coll., Act No. 226/2003 Coll. and Act No. 277/2003 Coll.

Manufacturer:

BEWIT Natural Medicine, s.r.o.
Michalská 2030
710 00 Ostrava
Company ID: 29443237

Person authorized to compile technical documentation:

BEWIT Natural Medicine, s.r.o.
Michalská 2030
710 00 Ostrava
Company ID: 29443237

We hereby declare, under our sole responsibility, that the equipment specified below complies with the essential requirements of:

Act No. 22/1997 Coll. on Technical Requirements for Products,
Government Regulation No. 176/2008 Coll. on Technical Requirements for Machinery,
Government Regulation No. 90/2016 Coll. on the Assessment of Conformity of Specified Products when Placed on the Market,
Government Regulation No. 118/2016 Coll. laying down technical requirements in accordance with Directive 2014/35/EU (LVD – Low Voltage Directive),
Government Regulation No. 117/2016 Coll. laying down technical requirements in accordance with Directive 2014/30/EU (EMC – Electromagnetic Compatibility Directive),
Act No. 634/1992 Coll. on Consumer Protection,
Government Regulation No. 387/2002 Coll. on General Product Safety,
Government Regulation No. 258/2000 Coll. on Public Health Protection,
Decree No. 38/2001 Coll. of the Ministry of Health on hygienic requirements for products intended to come into contact with foodstuffs,
and other related regulations and standards that apply to the product.

Electrical equipment:

Name	Aroma diffuser
Type/Model	CUTE OWL
Year of manufacture	2026

Description and purpose of the electrical equipment:

Ultrasonic aroma diffuser.



NATURAL
MEDICINE

BEWIT Natural Medicine, s.r.o.
Michalská 2030
710 00 Ostrava
Company ID: 29443237

+420 731 15237
info@bewit.cz
www.bewit.cz

List of applied technical regulations and standards:

EN IEC 55014-1, EN IEC 55014-1:2021, EN IEC 55014-2:2021, IEC 62321-3-1:2013,
IEC 62321-4:2013+Amd01:2017, IEC 62321-5:2013, IEC 62321-6:2015,
IEC 62321-7-1:2015 & IEC 62321-7-2:2017, IEC 62321-8:2017

Chosen conformity assessment procedure:

Assessment of conformity under the conditions specified by importer: Act No. 22/1997 Coll.,
as amended, § 12, paragraph 3, letter a).

The electrical equipment complies with all relevant provisions of the following legal
regulations of the European Community:

Directive 2006/42/EC of the European Parliament and of the Council on machinery
(Government Regulation No. 176/2008 Coll.).

In Ostrava, date *24/3/2026*

First name and surname, position in the company:

Jiri Cernota, founder and managing director

Signature: *Jiri Cernota*



NATURAL
MEDICINE

BWIT Natural Medicine, s.r.o.

Česká republika, 720 00 Ostrava

U Průmyslu 1A

Identifikační číslo: 22042037

☎ +420 58 570044

✉ info@bwit.cz

🌐 www.bwit.cz