

ULTRASONIC AROMA DIFFUSER SMELL300



User manual

Product description

The aroma diffuser combines elements of traditional oriental culture with the latest knowledge and technology of modern science. Using ultrasonic technology, it breaks down water and essential oils into a fine mist of microparticles that is released into the air along with active ingredients and anions. This technology does not heat the essential oils and therefore preserves their full therapeutic effects. The diffuser thus naturally scents and humidifies the environment, promotes relaxation, quality sleep, concentration and overall well-being, while helping to neutralize unwanted odors in the interior.

Specifications

Product: aromatherapy diffuser

Dimensions: 168 x 122 mm

Weight: 550 g

Power supply: AC adapter

Vstup: 100-240V 50/60Hz

Output: DC 24V 600 mA

Electrical cable length:

Approximately 50 cm Power: 8 W

Timer: 1H/3H/6H/ON

Aromatherapy: Due to the high ultrasonic vibration, the mixture of water and essential oil can spread in small molecules. The smell is therefore natural and not damaged by heat.


Thanks to this diffuser you can enjoy natural fragrance.

Ultrasonic frequency: 2.4 MHz Range: 10-30 m²

Water volume: 300 ml Led light: 7 pcs

Material: PP, ABS

Accessories: AC adapter, water container

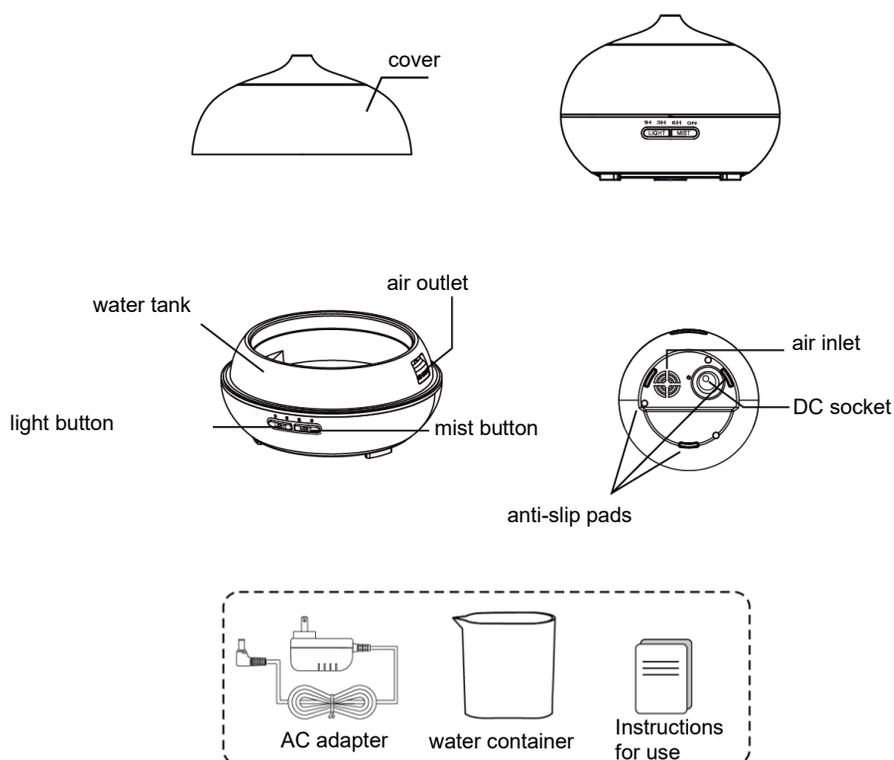

Warning

Please read the following safety instructions carefully before using this device. The following safety precautions are intended to prevent injury to you and others or to prevent damage to the product.

Safety instructions



RISK OF ELECTRIC SHOCK

- Plug the device only into a mains socket installed with the regulations, with a voltage corresponding to the rated voltage indicated on the type plate
- The device must never be soaked in liquid. Do not expose the device to moisture or use it outdoors. If liquid still enters the unit, immediately unplug the unit from the power outlet and have the unit repaired by qualified professional personnel.
- In the event of operational faults and before cleaning the appliance, remove the plug from the mains socket.
- When pulling the plug out of the socket, do not pull the cable.
- Do not wrap the power cord around the device and protect it from damage.
- If the power cord of this unit becomes damaged, it must be replaced by the manufacturer, its customer service or a qualified person to prevent hazards.
- Avoid bending or compressing the power cord, and ensure it is positioned so that no one can step on or trip over it.
- Never touch the appliance, power cord or plug with wet hands.
- Disconnect the appliance from the mains immediately after use. The appliance is fully disconnected from the mains only when the power plug has been unplugged from the outlet.
- Do not attempt to repair the appliance casing. In such cases, safety cannot be guaranteed and the warranty becomes void. Have the defective appliance repaired only by authorised service personnel.
- Make sure that the mains cable is not wet or damp during operation.
-  Never use the device near water, especially not near sinks, bathtubs and similar containers. The proximity of water poses a danger even if the device is switched off.



WARNING! Failure to observe this safety instruction could result in an accident. As a result, minor or serious bodily injury may occur.


The manufacturer is not liable for damages caused by improper use of the product.

- This appliance is not intended for use by persons (including children) with impaired physical, sensory or mental abilities or lack of experience and knowledge, unless they are permanently supervised or have been instructed in the use of the appliance by a person responsible for their safety.
- Use in environments with temperatures between 10 °C and 30 °C
- The device must only be used with the supplied power supply.
- Do not disassemble, modify or heat the device. Do not cut, damage, modify or strain the power cord. Electric shock or fire could result.
- Use only **clean, cold water** (bottled or tap water).

- **Never exceed the maximum water level.** Always pour the water before adding the essential oils. Use a measuring cup or other container to refill - do not fill the tank directly from the tap.
- Only add **water with essential oil** to the tank. Any other liquids may permanently damage the equipment or be harmful if inhaled.
- If the appliance smokes, has a strange smell or any unusual situation occurs, stop using it immediately.
- Do not touch any part of the device with wet hands.
- Do not let the mist spray directly onto furniture, clothes or walls.
- Essential oil can cause staining. **We recommend using only BEWIT essential oils.** In case of accidental spillage, use a clean cloth. **Internal use of this essential oil is prohibited!**
- Unplug the appliance when not in use.
- Do not cover the device with anything during operation.

Instructions for use

Carefully remove the cover from the water reservoir, pour clean cold tap water and essential oil into the reservoir and replace the cover.

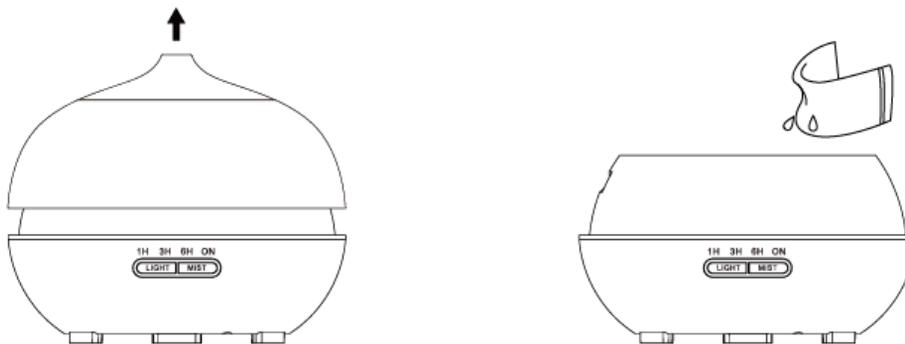


Water mist control

Press the "MIST" button for more than one second, set the timer to 1H, 3H, 6H or ON.

Light control

Press the button "LIGHT" button to turn on the LED lights, the colour of the light will change automatically, by re press the button to set the colour you like. To turn off the diffuser, press and hold the "LIGHT" button.

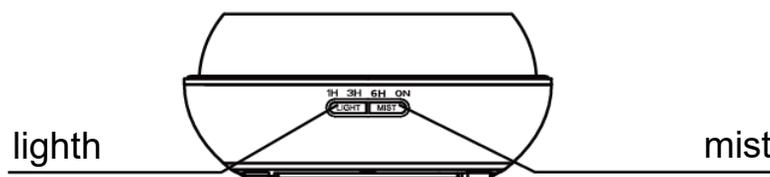

Operating instructions

1. Put the diffuser on a flat surface, remove the cover by moving upwards. Do not tilt the diffuser if there is still water in it. Figure 1
2. Connect the DC plug of the adapter to the DC-IN connector, see Figure 2
3. Fill the water tank with clean cold tap water using a measuring cup, but do not overfill it beyond the marked maximum capacity mark. Never pour water outside the reservoir. Never use hot water and do not fill the diffuser when it is turned on.
4. Add essential oil, we recommend adding 2 to 3 drops (0.20.3 ml) to a full container. Figure 3
5. Connect the AC plug to the power source and turn on the wall switch.
6. Put the cover on the tray. Do not tilt the diffuser to prevent the contents from spilling. Figure 4

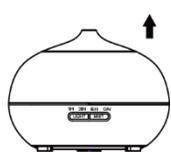


Figure 1

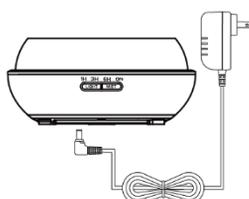


Figure 2

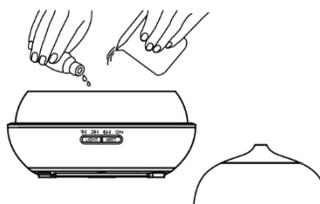


Figure 3

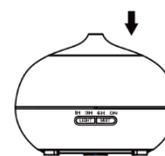


Figure 4

7. Press the "MIST" button for one second to switch on mist spraying, set the desired duration to 1, 3 or 6 hours or to continuous function by pressing again. To switch off the diffuser, press it again. If you hold the "MIST" button for more than 1 second, the diffuser will beep and switch off. Figure 5
8. Press the "LIGHT" button to switch the coloured LED lighting on or off. After the first press, the colours will automatically alternate. Press again to set one colour. Long press the "LIGHT" button for 2 seconds to turn off the LED lighting. Figure 5




Figure 5

9. If you have not used the diffuser for a long time, pour off the remaining water, clean the diffuser and leave it in a cool, dry place. Clean the diffuser with a neutral detergent before using it again. When connected to a power source, the diffuser is switched off. If the water level inside the diffuser is too low, it will automatically stop operating when you activate it. When the set time expires, the LED light turns off.

Maintenance


To ensure the longevity of this product, please carry out maintenance as instructed. After five to six uses or after 2 to 3 days of use, the diffuser should be serviced according to the procedure below.

Step 1: Disconnect the AC adapter from the power source, remove the cover and keep the unit stable on a flat surface.

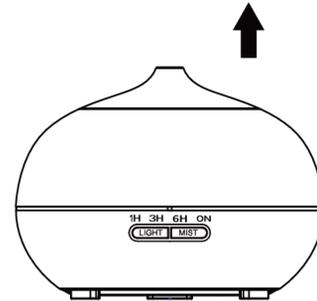


Step 2: If there is still water in the reservoir, pour it out to the side where it is intended to be poured out. Never pour the water away from the air outlet, as water may flow into the diffuser.

Side for emptying water

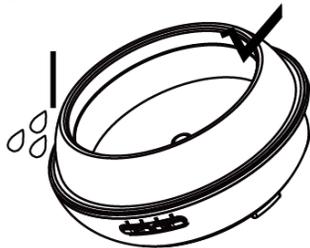


air outlet

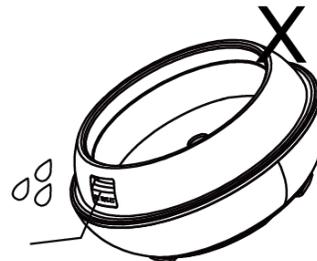

Step 3: Disconnect the DC plug from the diffuser.

Step 4: Remove any fragrance oil residue with a mild diluted kitchen detergent on a damp cloth, taking care not to leave any detergent residue on the diffuser. (IMPORTANT NOTICE: Be careful not to put strong pressure on the ultrasonic mechanism in the water tank or scratch it during cleaning.)


Ultrasonic mechanism

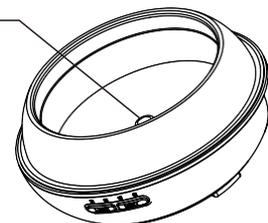

Step 5: Pour water into the tray, activate the diffuser and let it work for 30 minutes. Pour out any remaining water and clean the diffuser.

Step 6: If there is any dirt inside the air outlet, remove the cover and clean the valve.

Never use chlorine-based cleaners, acidic or enzymatic agents to clean the surface inside or outside the diffuser. Always use a neutral detergent.

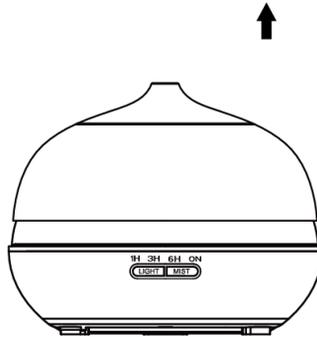



Disposal at the end of the life of the device

This product must not be disposed of as normal municipal waste. At the end of its useful life, take it to a collection yard or an electrical and electronic equipment recycling site, in accordance with applicable legislation. Proper disposal helps protect the environment and human health.

Dispose of product packaging (paper, plastic) in accordance with local waste sorting regulations.

Troubleshooting

The problem	Possible cause	Solution
The diffuser does not switch on	Not connected to power / faulty adapter	Check the adapter connection, or try another socket
The mist is not coming out	Lack of water / max. level exceeded / cover not fitted correctly	Refill water, fit the cover correctly
Light mist	Contaminated ultrasonic plate / hard water	Clean the plate with a soft cloth, use clean water
The device makes an unusual sound	Lack of water / uneven surface	Refill with water, place on a flat surface
The light is off	LED is off	Press the LIGHT button
Unpleasant smell	The tank is not clean	Clean the tank with a soft cloth
Water leaking from the tank	The cover is not correctly fitted / the device is tilted	Put the cover on correctly, stand on a horizontal surface

Warranty

This product has been rigorously tested before leaving the manufacturer. During the legal warranty period from the date of purchase, the customer may request a free repair or replacement due to defects caused by normal use. If necessary, contact the seller of the product.

Failures resulting from accidents, improper use or maintenance are not covered by the warranty.



BEWIT Natural Medicine,
s.r.o. Michalská 2030,
710 00 Ostrava
Tel: (+420) 731 739 539
Email: info@bewit.cz

**EU Declaration of Conformity**

according to Act No. 22/1997 Coll., as amended by Act No. 71/2000 Coll., Act No. 102/2001 Coll., Act No. 205/2002 Coll., Act No. 226/2003 Coll. and Act No. 277/2003 Coll.

Manufacturer:

BEWIT Natural Medicine, s.r.o.
Michalská 2030
710 00 Ostrava
Company ID: 29443237

Person authorized to compile technical documentation:

BEWIT Natural Medicine, s.r.o.
Michalská 2030
710 00 Ostrava
Company ID: 29443237

We hereby declare, under our sole responsibility, that the equipment specified below complies with the essential requirements of:

Act No. 22/1997 Coll. on Technical Requirements for Products,
Government Regulation No. 176/2008 Coll. on Technical Requirements for Machinery,
Government Regulation No. 90/2016 Coll. on the Assessment of Conformity of Specified Products when Placed on the Market,
Government Regulation No. 118/2016 Coll. laying down technical requirements in accordance with Directive 2014/35/EU (LVD – Low Voltage Directive),
Government Regulation No. 117/2016 Coll. laying down technical requirements in accordance with Directive 2014/30/EU (EMC – Electromagnetic Compatibility Directive),
Act No. 634/1992 Coll. on Consumer Protection,
Government Regulation No. 387/2002 Coll. on General Product Safety,
Government Regulation No. 258/2000 Coll. on Public Health Protection,
Vyhláška No. 38/2001 Coll. of the Ministry of Health on hygienic requirements for products intended to come into contact with foodstuffs,
and other related regulations and standards that apply to the product.

Electrical equipment:

Name	Aroma diffuser
Type/Model	Smell 300
Year of manufacture	2025

Description and purpose of the electrical equipment:

Ultrasonic aroma diffuser.



NATURAL
MEDICINE

BEWIT Natural Medicine s.r.o.
Michalská 2030, Ostrava
710 00
IČO: 29443237
Zapsaná v obchodním rejstříku
Městského soudu v Ostravě
K 2025

List of applied technical regulations and standards:

EN IEC 55014-1, EN IEC 55014-1:2021, EN IEC 55014-2:2021, IEC 62321-3-1:2013,
IEC 62321-4:2013+Amd01:2017, IEC 62321-5:2013, IEC 62321-6:2015,
IEC 62321-7-1:2015 & IEC 62321-7-2:2017, IEC 62321-8:2017

Chosen conformity assessment procedure:

Assessment of conformity under the conditions specified by importer: Act No. 22/1997 Coll.,
as amended, § 12, paragraph 3, letter a).

The electrical equipment complies with all relevant provisions of the following legal
regulations of the European Community:

Directive 2006/42/EC of the European Parliament and of the Council on machinery
(Government Regulation No. 176/2008 Coll.).

In Ostrava, date *1/10/2025*

First name and surname, position in the company:

Jiri Cernota, founder and managing director

Signature: *Jiri Cernota*



NATURAL
MEDICINE

BEWIT Natural Medicine s.r.o.
Sídlo: 702 00 Ostrava
IČ: 252 23 1234
Město: Ostrava
Číslo účtu: 25200000000000000000